

GB AWZ 279

QUICK REFERENCE GUIDE

Please also carefully read the "Instructions for Use".



	Very Wet Load	Wet Load	Load	Drying options		Gentle & Rapid cannot be selected together		Buzzer & Anti-Crease cannot be selected together		
	Indicative drying times (in minutes)		Kg			Délicat Gentle Reduces drying intensity (recommended for delicate items)	Coton intensif Rapid Shortens drying duration (recommended for small items)	Sonnerie Buzzer Signals/ Sounds end of drying cycle at intervals	Antifroissage Plus Anti-Crease Prevents laundry from creasing	
Cotton	80'	60'	3.0	Cotton Max. 5 kg	Prêt à ranger Cupboard dry +	Coton	Coton max 3.5 kg	Coton	Coton	Coton
	110'	90'	5.0							
	65'	50'	3.0		Normal Cupboard dry *	Coton	Coton max 3.5 kg	Coton	Coton	Coton
	90'	75'	5.0							
Synthetics	55'	40'	3.0	Synthétiques Max. 2.5 kg	Prêt à repasser Iron dry*	Coton	Coton max 3.5 kg	Coton	Coton	Coton
	75'	65'	5.0							
	30'	20'	1.0		Prêt à ranger Cupboard dry +	Synthétiques	-	Synthétiques	Synthétiques	Synthétiques
	40'	35'	2.5							
Shirts	20'	15'	1.0	Shirts Spécial chemises 1.5 kg	Normal Cupboard dry *	Synthétiques	-	Synthétiques	Synthétiques	Synthétiques
	35'	30'	2.5							
	15'	10'	1.0		Prêt à repasser Iron dry	Synthétiques	-	Synthétiques	Synthétiques	Synthétiques
	30'	25'	2.5							
Airing	-	-	-	Airing Fraîcheur	Laundry is aired and refreshed for 30 minutes without heating.	-	-	Fraîcheur	Fraîcheur	Fraîcheur
Time	-	-	-	20' 40' 60'	Completes drying or dries single items (suitable for all fabrics).	-	-	20' 40' 60'	20' 40' 60'	20' 40' 60'

Start Pause Départ (Pause)	Starts the drying cycle. The drying indicator lamp is blinking during the selection phase. Press to confirm the final selection.
 Start delay Départ différé	Delays the drying cycle start from 1 up to 9 hours. To select the start delay turn the programme selector knob to the desired programme, select the desired options and press the start delay button. With each touch of the start delay button, drying cycle start is delayed by one hour. Press the Start/Pause button to confirm your final selection. Start delay indicator blinks and the count-down is running by reducing the time in one hour steps. The count-down is indicated by the blinking of the start delay indicator located in the button. During count-down the drum will turn from time to time to redistribute the laundry. To cancel or to change the previously set time turn programme selector knob to "0" or open the door.
Remaining time Temps restant h. min. h.	After cycle start a default drying time is indicated depending on the selected drying programme. After several minutes the time will be adjusted to the real expected remaining time, depending on size, type and humidity of the load.
Anti-Crease Protection Antifroissage Plus	Re-distributes laundry in the drum. When the Anti-Crease option is selected and laundry has not been taken out, an anti-crease cycle is activated for 12 hrs. During the count-down the drum will turn from time to time to redistribute the laundry.
Filter Entretien filtre	The indicator lamp lights up when the filter needs cleaning. Clean the filter at the end of every cycle.
PROGRAMME SEQUENCE INDICATORS	
Séchage Drying	Lit: Drying is running.
Refroidissement Cool Down /Airing	Lit: Airing is running.
Fin End	Lit: End of programme.
Antifroissage Anti-Crease	Lit: Anti-Crease is running.

* Test programmes according IEC 61121.

5019 307 00077

PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

A) By care symbols (on the collar or inside seam):



Suitable for tumble drying



Tumble drying with reduced drying intensity only



Do not tumble dry

B) By amount and thickness/weight

Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

C) By type of fabrics

Cotton/linen: Towels, cotton jersey, bed and table linen made of cotton or linen.

Synthetics/Easy Care: blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

D) By drying level

- Sort into: iron dry, cupboard dry, etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Important: only use specific indicated dryer-safe additives and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. **Only use specific indicated dryer-safe plastic items** and never dry rubber or articles contaminated with vegetable oil in the dryer.

SELECTING A PROGRAMME & OPTIONS

Programme and Options:

- To select a programme, turn the programme selector knob. The Start/Pause indicator lamp is blinking, indicating that the cycle needs to be started.
- To select an option, press the corresponding button. The indicator lamp in the button confirms that a selection has been made.
- Press the button again to cancel the option.

STARTING & COMPLETING A PROGRAMME

1. Having selected the desired programme and options, press the Start button.
If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals, preventing the laundry from creasing.
This Anti-Crease cycle can be extended up to 12h when Anti-Crease option has been selected.
2. On completion of the programme, set the programme selector knob to position "0".

CHANGING A PROGRAMME

When changing the programme during the drying cycle, the dryer stops. The Start/Pause indicator lamp is blinking.

To operate the new programme, press the Start/Pause button again.

INTERRUPTING A PROGRAMME

To interrupt the dryer during operation

1. Set the programme selector knob to Airing.
2. Press the Start button.
Wait at least 5 minutes before opening the door to allow the dryer to cool down.
For your safety the programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the Start/Pause button again.

DAILY MAINTENANCE & CLEANING

Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Remove lint using a soft brush or your fingertips.
4. Push the filter back into place.

TROUBLESHOOTING GUIDE

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?

The dryer does not operate:

(after a power failure and/or interruption to the mains supply, always press the Start button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the Start/Pause button been pressed?

Lint filter indicator lamp light on:

- Is the lint filter clean?
- Is the vent hose blocked?

All programme sequence indicators blinking:

- Service call necessary.

AFTER-SALES SERVICE


If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

CONTENTS

QUICK REFERENCE GUIDE

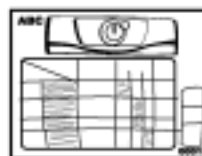

PROGRAMME CHART

PREPARING THE LAUNDRY

SELECTING A PROGRAMME AND OPTIONS


STARTING AND COMPLETING A PROGRAMME

CHANGING A PROGRAMME

INTERRUPTING A PROGRAMME

DAILY MAINTENANCE AND CLEANING

INSTRUCTIONS FOR USE

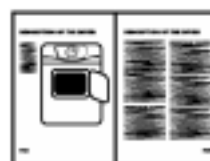

BOOKLET

BEFORE USING THE DRYER / CONNECTIONS	PAGE 4
ELECTRICAL CONNECTION	PAGE 5
PRECAUTIONS AND GENERAL RECOMMENDATIONS	PAGE 6
DESCRIPTION OF THE DRYER	PAGE 7
VENT CONNECTION	PAGE 8
DOOR REVERSIBILITY	PAGE 9
TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE	PAGE 10

BEFORE USING THE DRYER / CONNECTIONS

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.
- After installation access to the mains plug has to be guaranteed, or the all-pole disconnection has to be possible with a switch.

3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures around freezing (or above 35°C).
- Remove the protective foil from the control panel.

Stability:

When installing the dryer always carefully level the dryer adjusting the two feet and check the correct levelling with a spirit level.

To built in the dryer

- For security reasons do not remove the worktop.
- Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

Stacking kit

Your dryer can be stacked on top of your front loading washing machine. To do this, use stacking kit AMH 542, available at your dealer.

Minimum housing dimensions:

Width: 600 mm

Height: 850 mm

Depth: 560 mm



ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

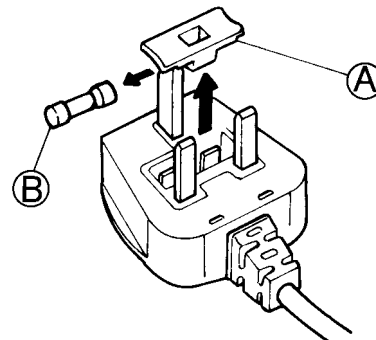

2) For the Republic of Ireland only


The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing

The packing box may be fully recycled as confirmed by the  recycling symbol.

2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
 - By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy.
 - Do not overdry the laundry.
 - Clean the lint filter after **every** drying cycle.
 - Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
 - Always select the correct programme/drying time for the load in order to obtain the desired drying results.
 - Select the *gentle* option only with small loads.
 - When drying cotton, for example: dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.
- ### 3. Disposing of packaging and old appliances.
- The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.
- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.
- ### 4. Child safety:
- Children must not be allowed to play with the dryer.
- ### 5. General recommendations:
- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
 - Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
 - To clean the outside of the dryer, use a neutral detergent and a damp cloth.
 - Do not use abrasive detergents.

Clean the lint filter at the end of every drying cycle:

1. Open the door.
 2. Pull the filter upwards.
 3. Remove lint using a soft brush or your fingertips.
- Push the filter firmly back into place.
 - Wipe away lint from the door seal and the door using a damp cloth.
 - If the lint filter mesh is clogged, clean it with water and a soft brush.
 - If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

EC Declaration of Conformity

- This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:


- 73/23/EEC Low Voltage Directive
- 89/336/EEC EMC Directive
- 93/68/EEC CE Marking Directive.



- The dryer must be used in the household for the described uses.

DESCRIPTION OF THE DRYER

- A. Work top
- B. Contact pin
- C. Door
 - To open the door: pull the handle
 - To close the door: push gently until closed.
- D. Filter

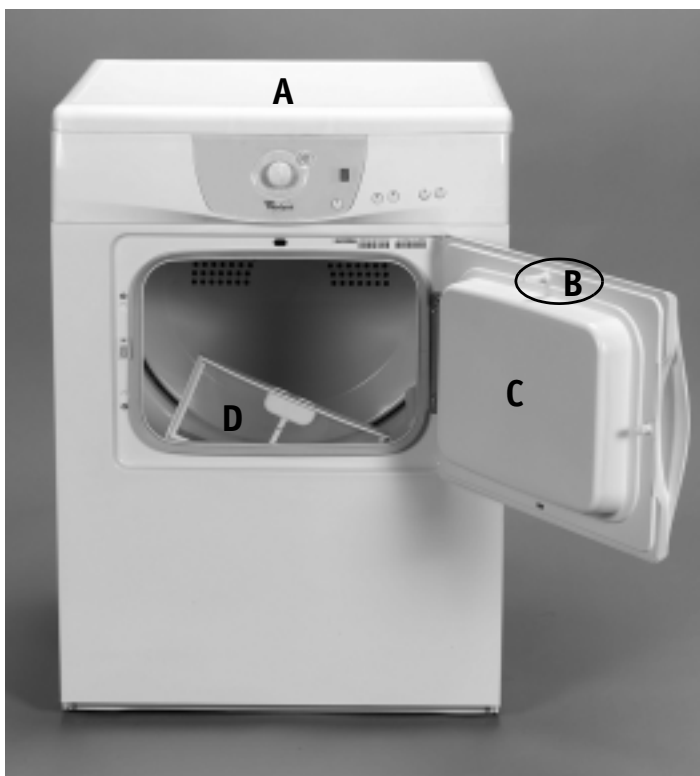

Reminder - Maintenance and Cleaning

Clean the lint filter at the end of every drying cycle:

Open the door.
Pull the filter upwards.
Remove lint using a soft brush or your fingertips.

VENT CONNECTION

In some dryer models the vent hose together with an adaptor is supplied in the drum. If the hose and adaptor are not supplied as a standard the optional accessory AMH 577 kit, available at your dealer.

Note: If the vent hose is not supplied, the AMH 577 kit, available from your dealer, should be used.

Installing the vent hose

- A.** Place a towel or the packing material on the right-hand side next to the dryer.
- B.** Place the dryer on its right-hand side (seen from the front) on the towel or the packing material.
- C.** Push the adapter into the hose (see illustration). Attach the air vent hose adapter to the connection located under the dryer and lock it by means of the foreseen lugs.

Venting outside

- Without kinking it, lead the vent hose outside (inside diameter 10 cm, maximum length with two bends 3 m).
- Ensure that the vent hose does not sag when stacking the dryer on a washing machine. It should only be placed horizontally or upwards.
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.
- Do not connect the air vent hose to a chimney or to a mechanical ventilation extractor duct.
- Do not connect the vent hose to the heating system. Only connect the hose to ventilation systems insulated against humidity.


Dryer operation without vent hose

- Only use the dryer in a large, well-ventilated room.
- Keep the room free of dust.

A minimum distance of 10 cm between rear of appliance and the wall must be observed.

Dryer placed close to the wall; venting to the left or right




Install the dryer by using the bi-directional kit AMH 869, available at your dealer, should be used.

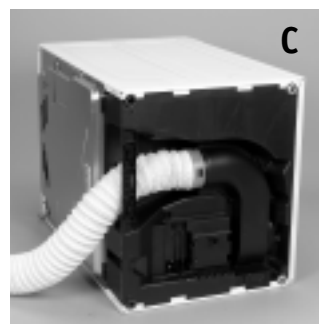

DOOR REVERSIBILITY

Door Reversibility

- A. Unplug the dryer.
- B. Open the door.
- C. Using a spanner, turn the contact pin on the inside of the door (top) through 90° and remove it.
- D. Remove the 2 door hinge screws, followed by the door.
- E. Unscrew the 2 screws above and below the door lock system.
- F. Removing the door lock: using a screwdriver, press down on the small rib in the upper opening and extract the door lock by pulling it towards you.
- G. Reverse the door:
- H. Fasten the door on the desired side using the 2 screws.
- I. Insert the door lock system on the opposite side and lock it securely.
- J. Fix the 2 screws above and below the door lock system.
- K. Replace the contact pin in the inside of the door (top).

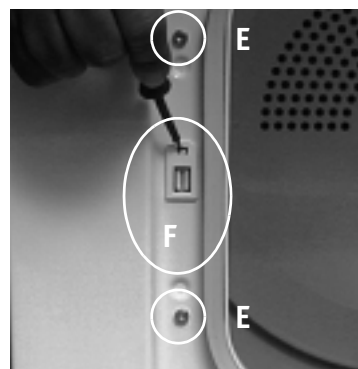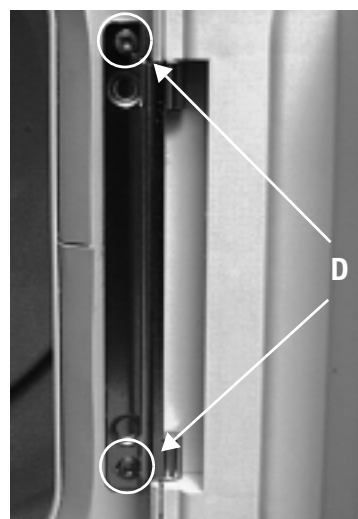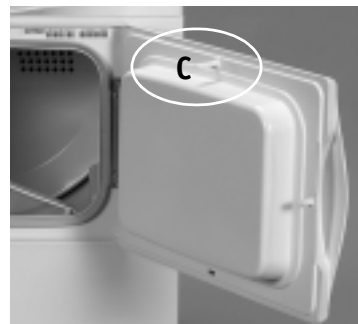

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

Troubleshooting Guide

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?

The dryer does not operate:

(following a power failure and/or interruption to the mains supply, always press the Start button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the start delay option been selected?
- Has the **Start/Pause** button been pressed?

Lint filter indicator lamp light on:

- Is the lint filter clean?
- Is the vent hose blocked?

After-Sales Service

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000

